 




Tyrannosaurus Difficulty ★☆☆








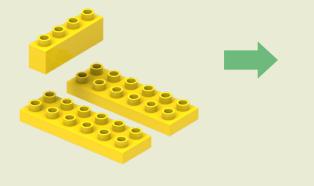

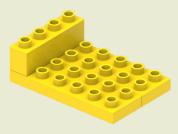





* Assemble separately L and R!!

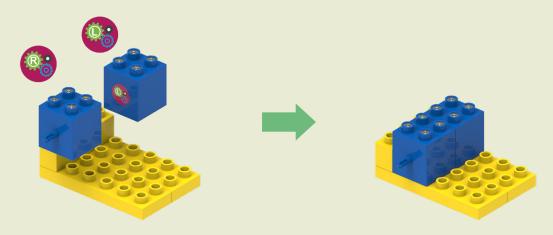




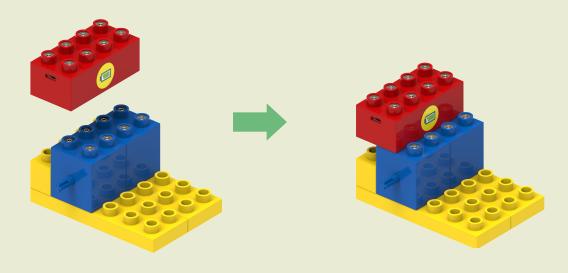




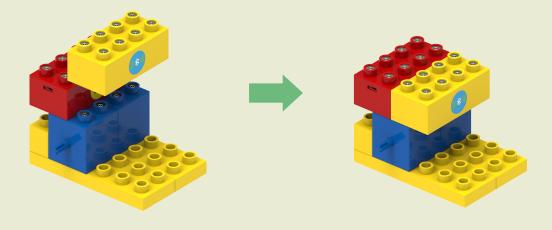




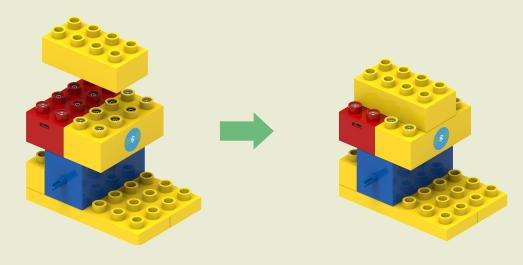




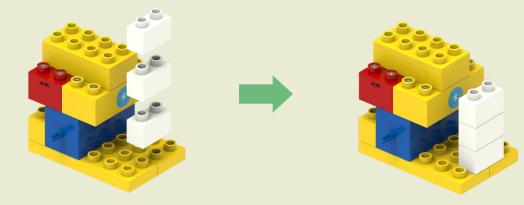




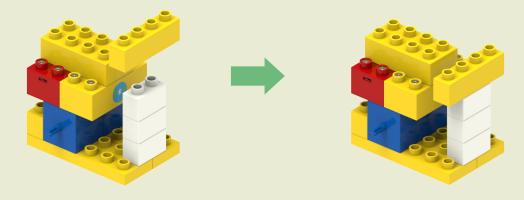




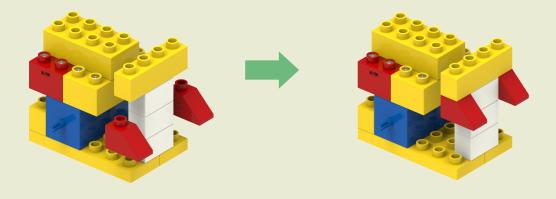




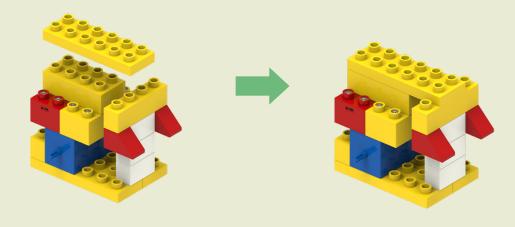





 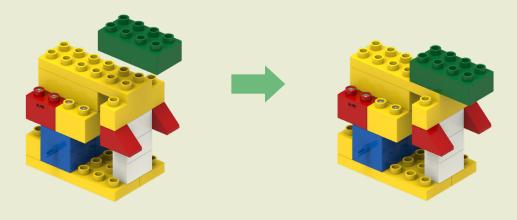


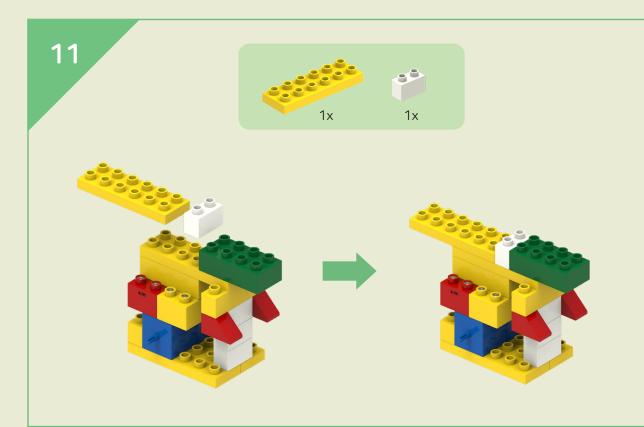




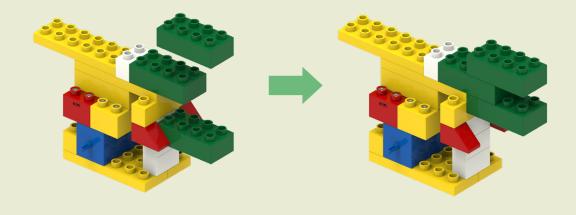


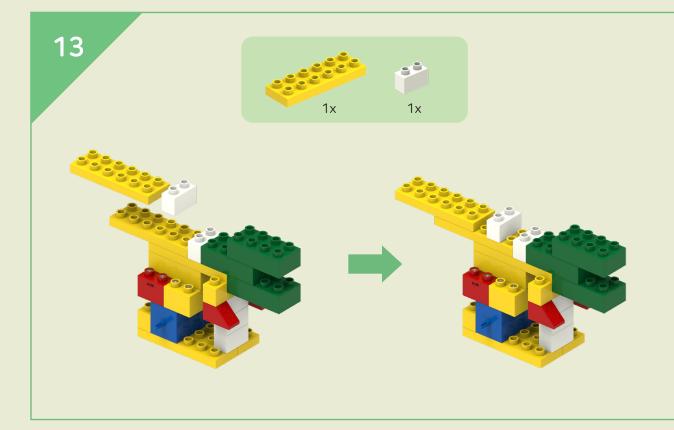



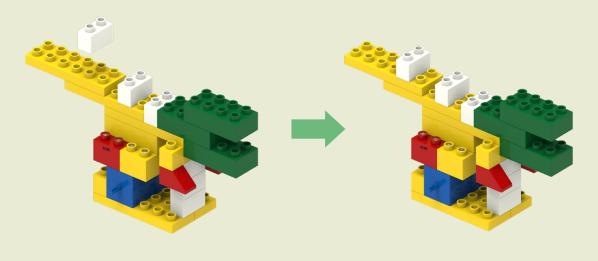




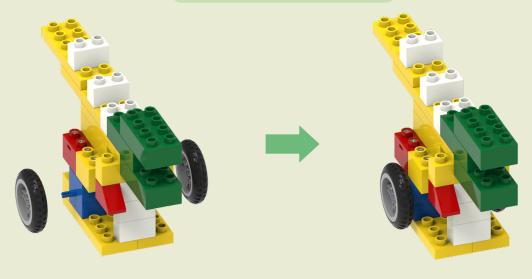




2x

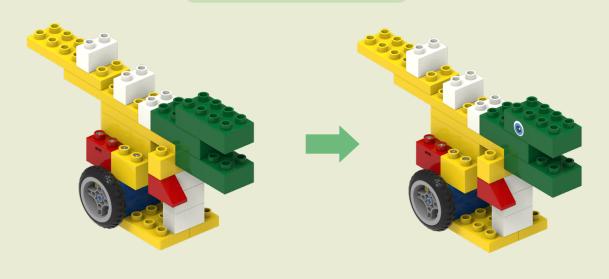

Battery Block & Bluetooth Remote

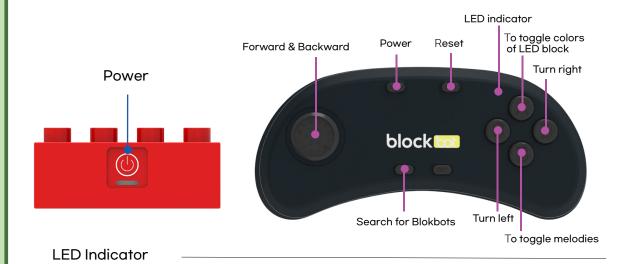

Blue: Looking for Blockbots to connect. Green: Connection established. Red: Failed to locate a Blockbot. If LED alternates RED & Green, please change battery of remote.

How to connect to your Blockbots. (using Bluetooth)

- 1. Turn on the power of Blockbot first.
- 2. Turn on the power of Remote.
 - : LED indicator will change from Red to Blue to look for Blockbots.
- ♣ Once connected, LED indicator will change to Green.

If the remote failed to connect, please follow instructions below.

- 1. Turn on the power of Blockbot & Remote.
- 2. Check LED indicator is in RED, meaning connection has NOT been established.
 - : Press "Reset" button until LED indicator blinks in Blue.
- 3. Press "Search for Blockbots" button once.
- **★**Once connected, LED indicator will change to Green.
- * Once paired, the pair will connect to each other when the power is on.



Notifications regarding Special Act on the Safety of Children's Products

Category of products: Smart Toy (Educational Robotics)

Model: Blockbot Series Contact: 250, Gaepo-ro, Gangnam-gu, Seoul,

Manufactured by: 130T Inc.

Republic of Korea 06309
+82) 2-2135-7979

For age: +3 yrs (3 years old and above)

Made in Korea



Precautions for Your Safety

- 1. Please be careful for children not to put Blockbots in their mouths, and avoid water or fire.
- 2. Please keep Battery blocks turned off after use, and keep batteries out of the reach of children.
- If there is any smell, sound, or smoke while charging the battery block, immediately turn the power off and disconnect it from the plug.
- 4. Please make sure it is under supervision of adults while Blockbot is charged, and please disconnect it from the plug when it is fully charged.
- Do not use nor leave the Battery blocks in direct sunlight nor in high-temperature areas.
 Battery blocks should be kept in the area where temperature is in between 0 ~ 40 in celcius.
- Do not charge near combustible objects or flammable surfaces (carpet, wooden floor, wood furniture, etc.).
 Also, please do not charge near conductors.

